


MCT INS-2025-Rev. A


MCT rectangular transit

1

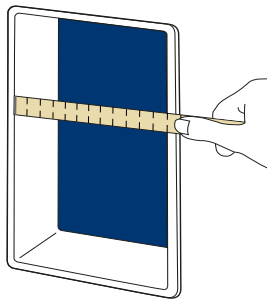


Size	H (mm)	W (mm)
1	101 ±1	60,25 ±0,5
2	101 ±1	120,5 ±1
3	159,5 ±1	60,25 ±0,5
4	159,5 ±1	120,5 ±1
5	218 ±1	60,25 ±0,5
6	218 ±1	120,5 ±1
7	276,5 ±1	60,25 ±0,5
8	276,5 ±1	120,5 ±1


Measure the opening and check that the measurement is within the tolerance range in the table.

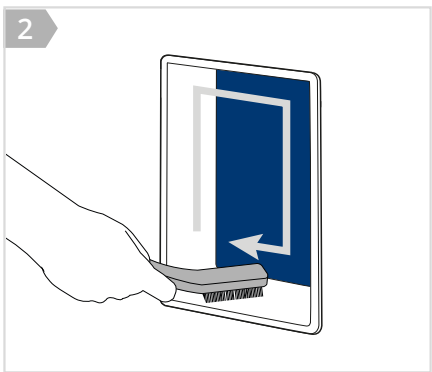


Clean the aperture.

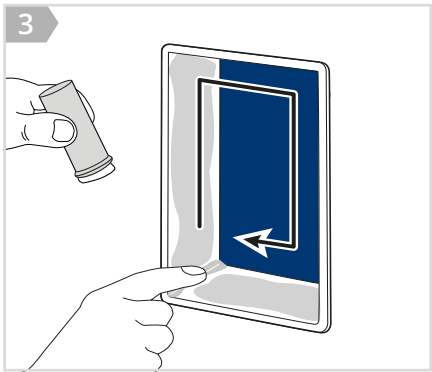


Lubricate the sealing surfaces of the frame with MCT Brattberg Lubricant. Lubricate the corners thoroughly.

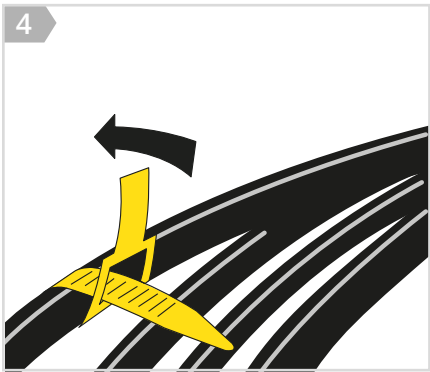


Measure the diameter of the cables and choose suitable blocks.

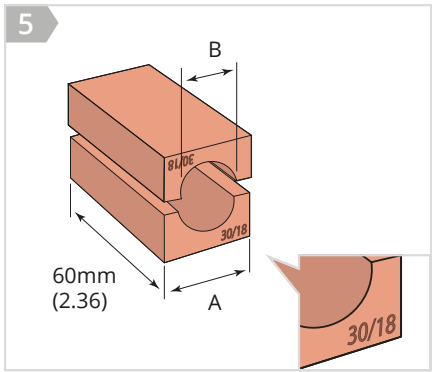

Insert Blocks are identified by their width (A) and hole diameter (B).
A block that is 30 mm (1.18") wide and has a hole diameter of 18 mm (0.71") is marked 30/18. This marking is cast into the block.

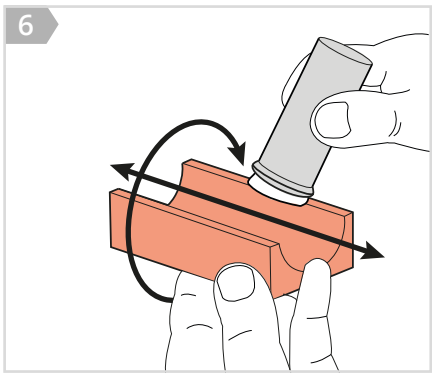


Lubricate the sealing surfaces of any block.

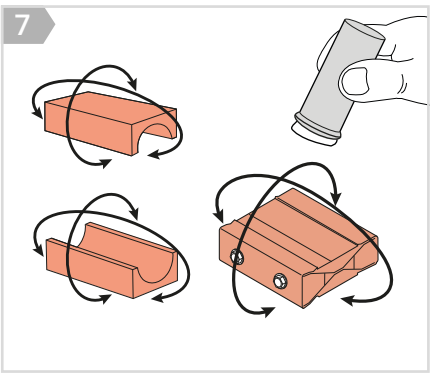


Lubricate the indicated areas of sealing surfaces.

8 Proceed 8


MCT rectangular transit

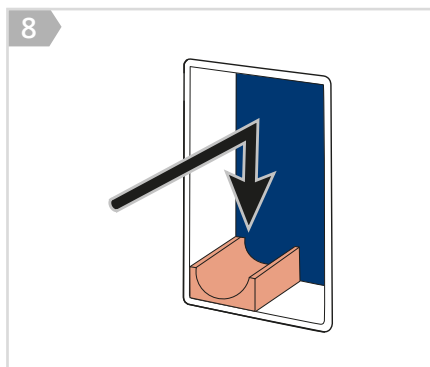


Insert a half insert block.

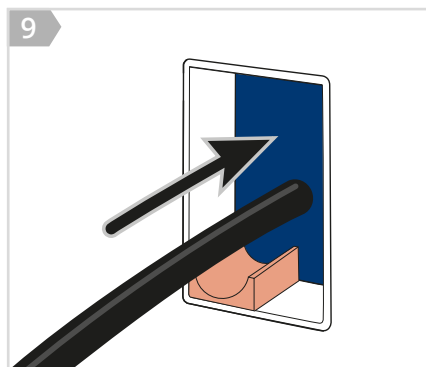


Insert a cable or pipe.

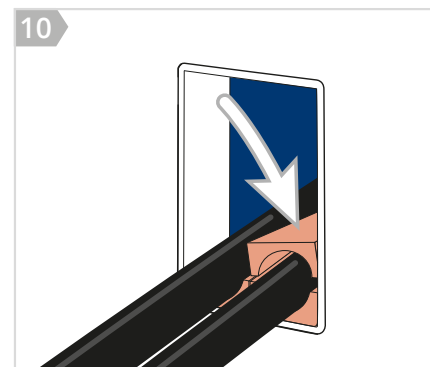

Continue to fill the transit considering your installation plan or RGPlan.

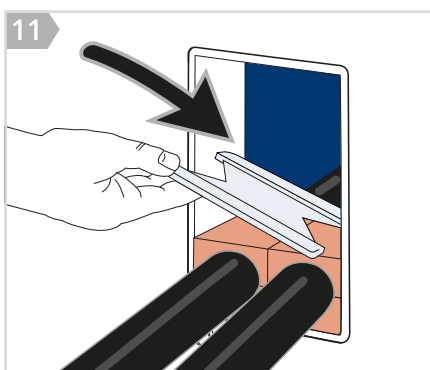

If possible, place a stayplate between each row of insert blocks.

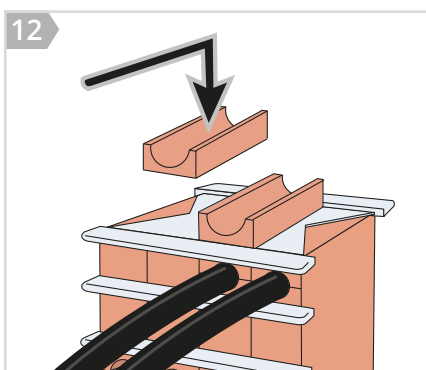

Ensure that the blocks are secured within the stayplate edges.




Note:

- Note: Please see page 10 for disclaimers.


Disclaimer - pressure & watertight installation

All contact surfaces inside the frame must be cleaned carefully prior to installation.


- Make sure the frame is clean and lubricate the inside of the frame thoroughly. Lubricate all Lycron parts carefully with the MCT Brattberg lubricant.
- Place the compression plate in the center so that the rubber can come up between the compression plate and the frame on both sides of the plate
- The penetration must not be subjected to pressure for at least 48 hours after installation. This is to allow the pressure to equalise throughout the penetration. It will take more time for the pressure to equalise at temperatures below 20°C.
- Installation/testing of transits should only be performed by MCT Brattberg trained installers.
- Note: If the installation is subjected to pressure, all components must be replaced after removal and refitting.
- Use of 120/0 below waterline is forbidden.

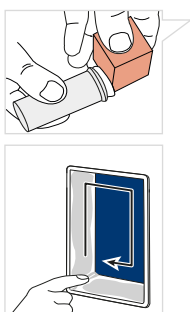


Proceed PTG

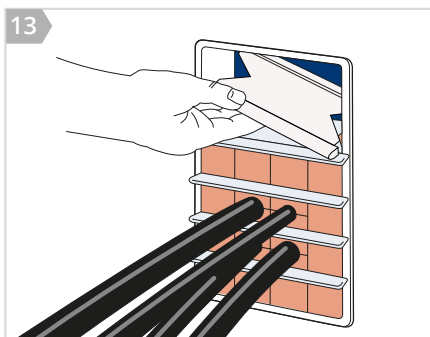


Before inserting the final row of blocks, insert two stayplates.

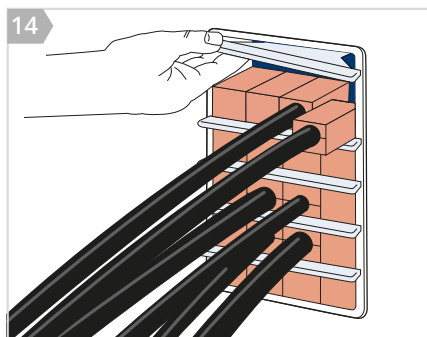


Separate the two stayplates and insert the final row of blocks between the stayplates.

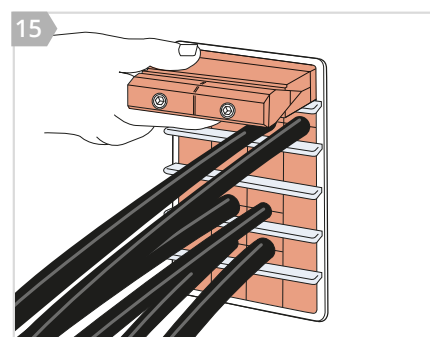

Lubricate and insert PTG.

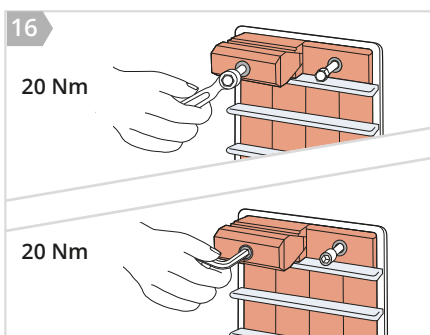


Tighten the screws alternately in small steps until full stop or 20 Nm.

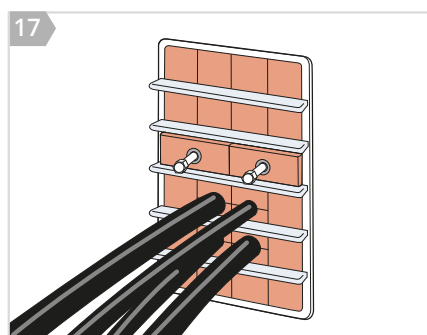


PTG can be inserted anywhere in the frame.


Proceed STG

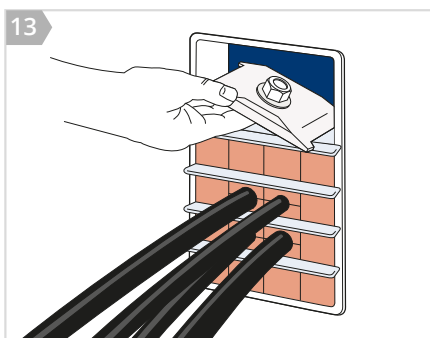


Pack the frame. Place stayplates before the final row of blocks, the compression plate is placed with stayplate.

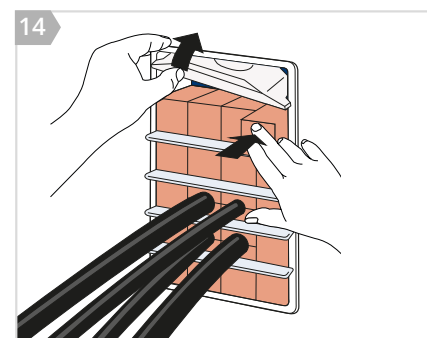


Insert the top row of blocks.

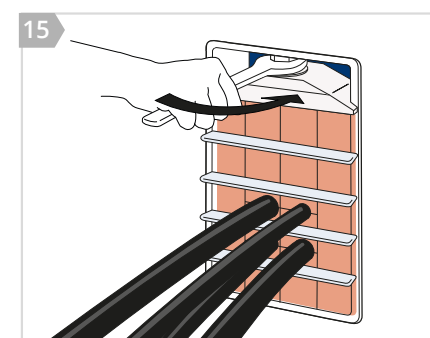

Tighten the bolt in the compression plate anticlockwise until there is a gap of 32-33 mm (1.26-1.30") between the top of the plate and the inside of the frame.

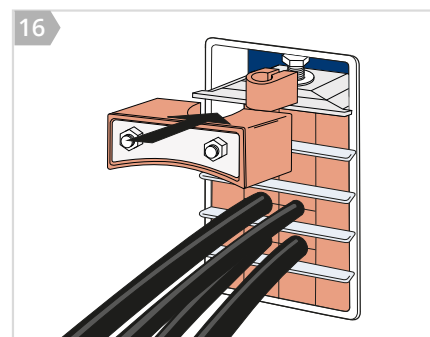

Insert the STG endpacking with the tongue around the compression bolt.

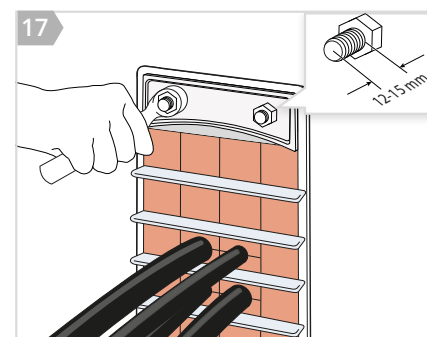


Tighten the nuts in the endpacking until 12-15 mm (0.47-0.59") of thread is visible.


After installation inspection

- Are the PTG screws tightened?
- Is the combined height of blocks correct according to the frame packing height?
- Are all blocks secured by stayplates?
- Is there visible protruding lubricant?


Horizontal Installation

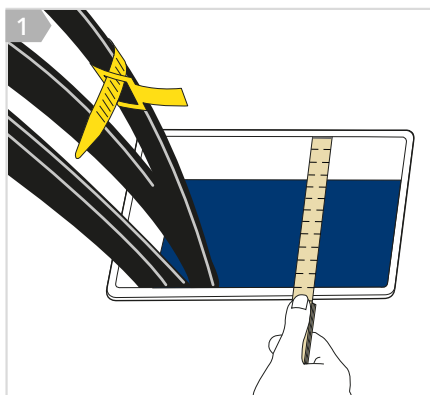


Measure the opening and check that the measurement is within the tolerance range.

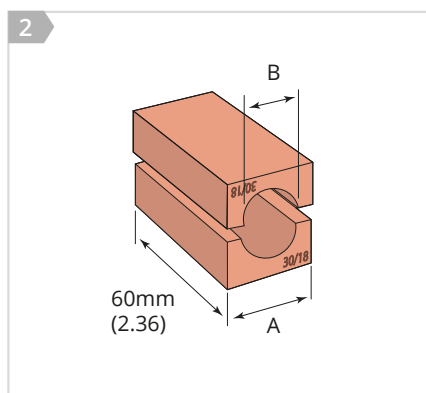


The blocks are identified by their width (A) and hole diameter (B). A block that is 30 mm (1.18") wide and has a hole diameter of 18 mm (0.71") is marked 30/18. This marking is cast into the block.

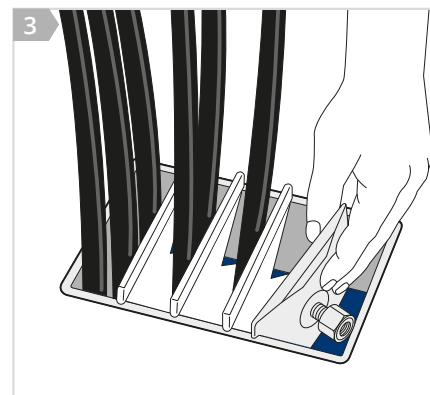


To prevent the blocks from falling through during horizontal installation, fit all the stayplates and the compression plate first. Check the RG plan to make sure the cables are positioned correctly.

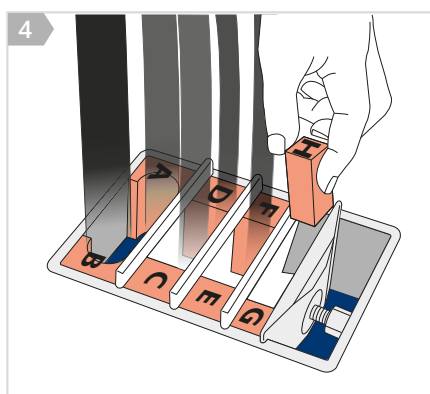

Insert the outer blocks first (A, B, C, etc). Then insert the rest of the blocks. Note: block A must be rotated 90°, see diagram.

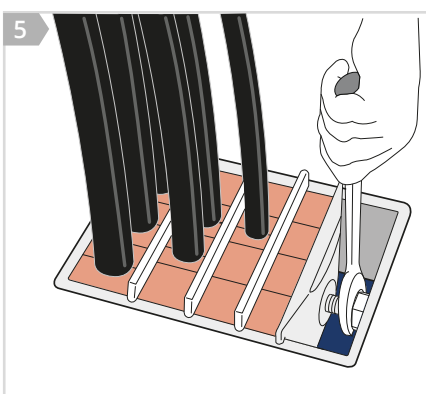


Pack the frame. Tighten the bolt in the compression plate anticlockwise until there is a gap of 32-33 mm (1.26"-1.30") between the top of the plate and the inside of the frame.

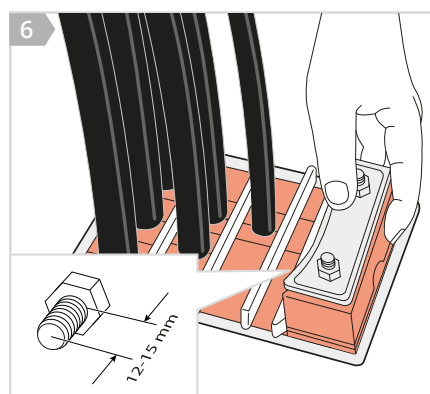


Insert the STG endpacking with the tongue around the compression bolt. Tighten the nuts in the endpacking until 12-15 mm (0.47"-0.54") of thread is visible.


U-Block

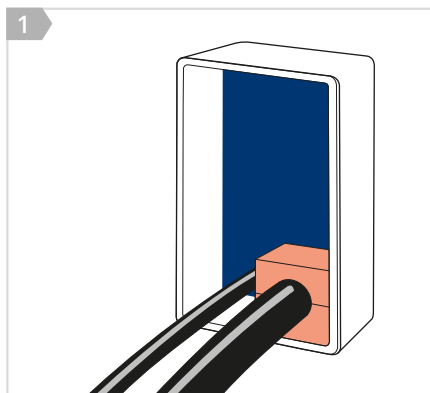


1 Select a suitable block for the largest cable in the row.

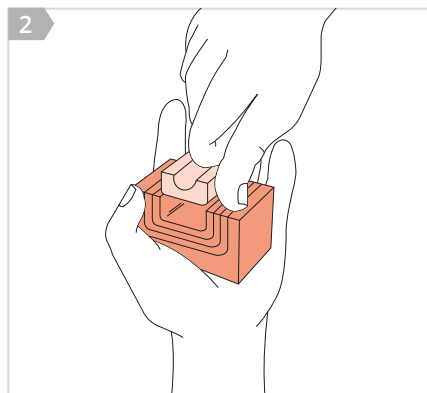

2 Select a suitable InsertBlock or AddBlock for the small cable. Then create a base using U-Blocks. The external measurements should be the same as the previous block.

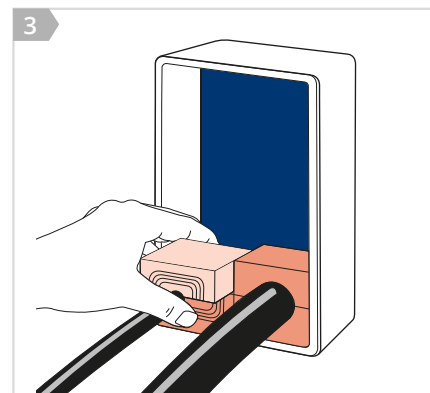


3 Start packing the frame.

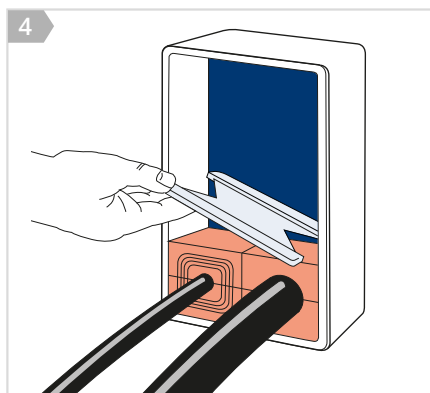


4 Insert stayplates between each row of insert blocks.


AddBlock

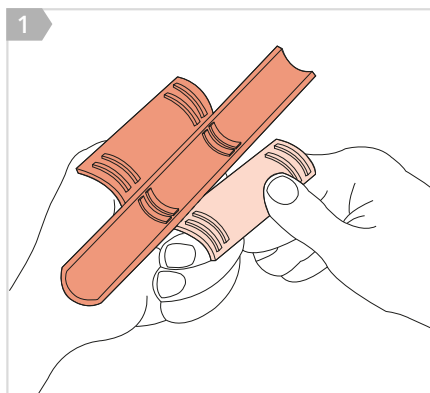


Tear off attached sheet to fit the dimension selected.

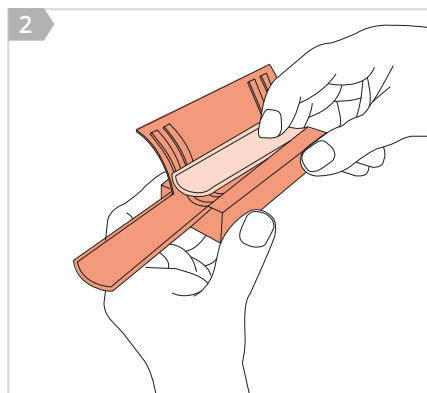


Place sheet into centre slot and affix it with the unique locking device.

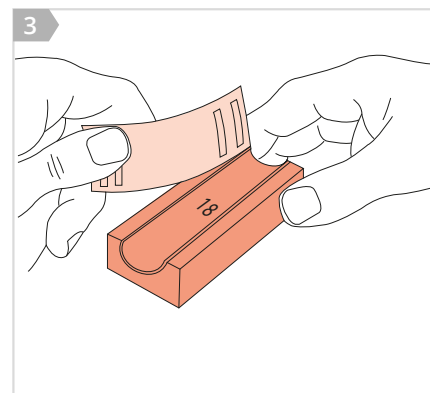

Tear off superfluous sheets.

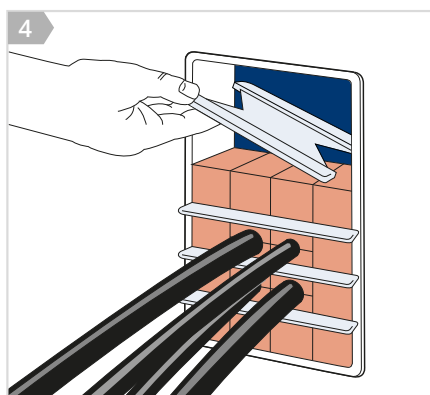


Pack the frame. Place stayplates between each row of blocks.

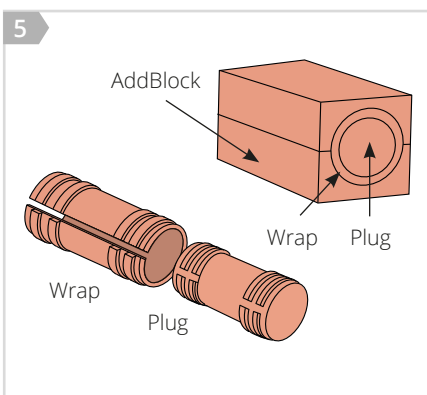


Plugs for AddBlock


Handiblock

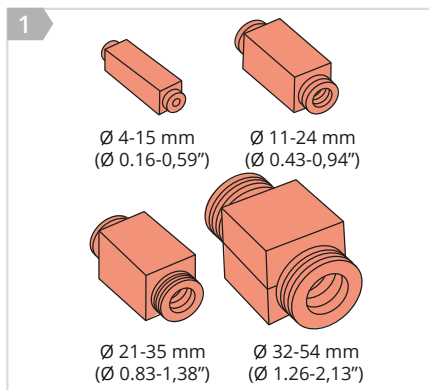


Select the HandiBlock that fits the cable / tube.

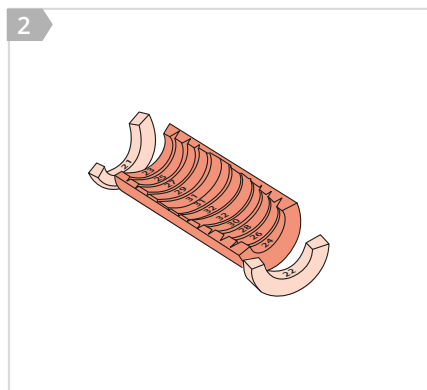


Select the two compression rings closest to the cable diameter. Remove all compression rings smaller than the selected.

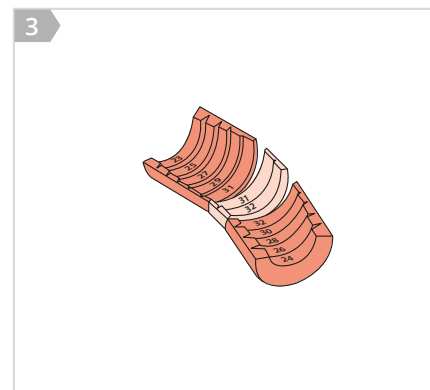


If the insert gets longer than the block, remove the current rings in the middle.

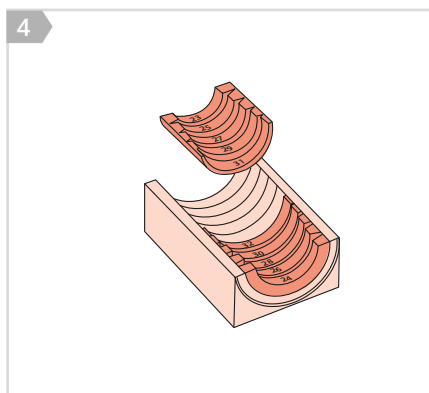

Place the two inserts in the main block so that the outermost rings are at the outer edge of the main block.


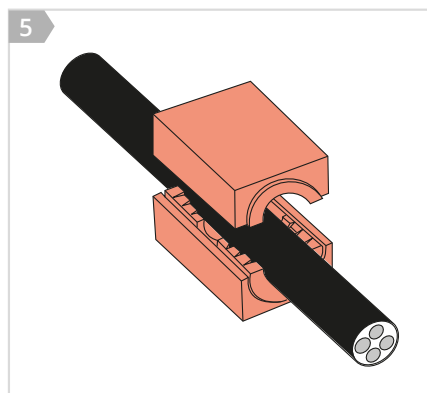


Build the second block half the same way. Insert the cable / tube and lay over the block half. Continue packing as shown in figure 4 on the left side.

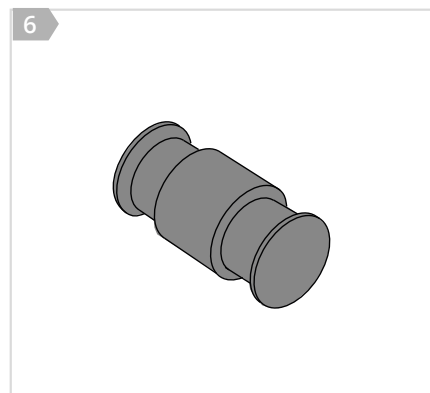



Plugs for HandiBlock

RGSC with STG Endpacking

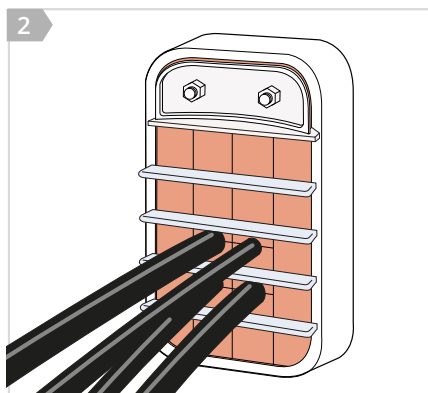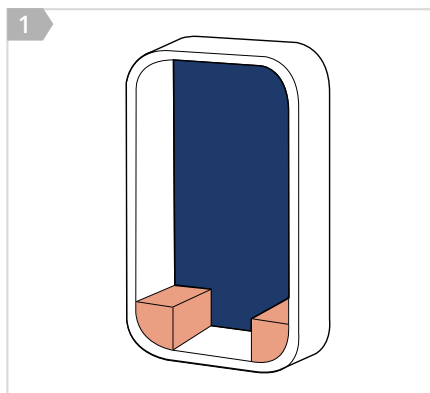


Begin packing with the special corner blocks. Proceed as shown in image 3 and then see STG Endpacking image 4-6. Insert endpacking C-STG (with special corner blocks). Tighten the nuts on the endpacking to compress and complete the seal. About 12 mm (0.47") of the thread should protrude on each bolt. (0.47") of the thread should protrude on each bolt.


RGSC with Presswedge

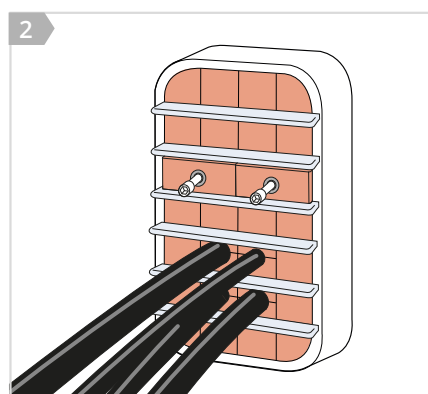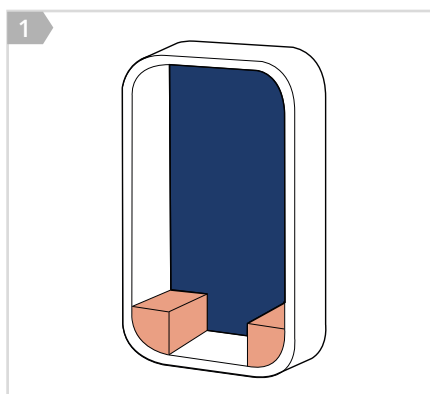

Begin packing with the special corner blocks. Proceed as shown in image 3 and then see PTG Presswedge. The PTG presswedge can be placed anywhere except at the top or bottom. At the top row insert the special corner blocks and then the last row of blocks. Tighten the nuts in the PTG to the end or 20 Nm.

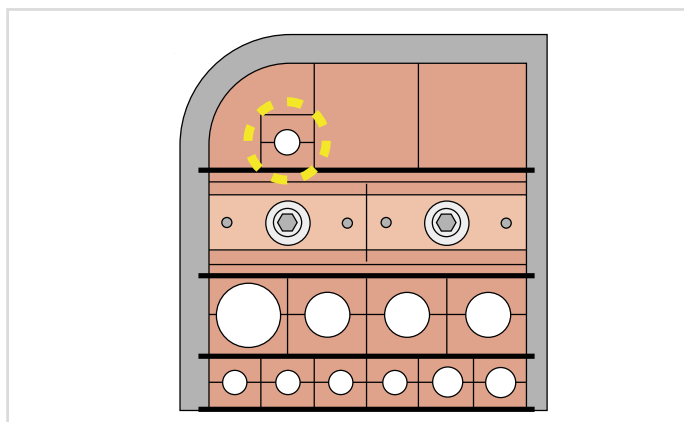

For some RGSC corner blocks, support is provided by only one stayplate instead of two – this is fully approved. In fact, in every transit the top and bottom rows of module blocks are always supported by a single stayplate. This is the standard and correct installation principle.

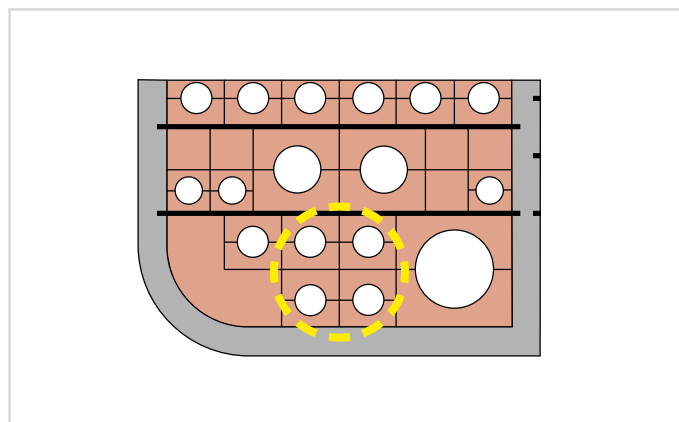


There are cases user is forced to mix modules with the condition of a pressure limitation of 3 Bar, a mix of different size modules beside a large module up to module size 90. This is for situations where it is not possible to use Stayplate due to packing space or design. Contact MCT Brattberg for more information.

RGSC - Optimal arrangement of blocks


The figures show the optimal arrangement of blocks. As far as possible, all blocks should be installed with the support of a stayplate.

Any arrangements other than the figures shown should be carefully considered. Consult your local surveyor and MCT Brattberg for advice if the design arrangement deviates from the figures.


R20 - C20/0

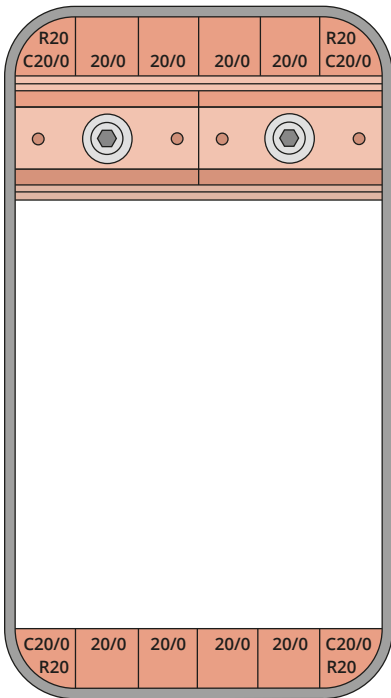


R20 - C30/0

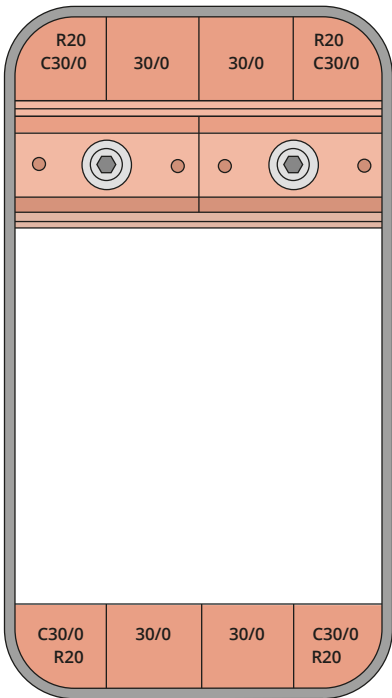


R40 - C40/20x20

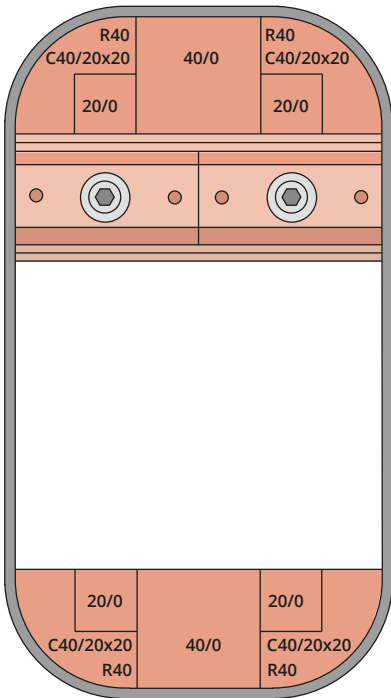


R40 - C60/0

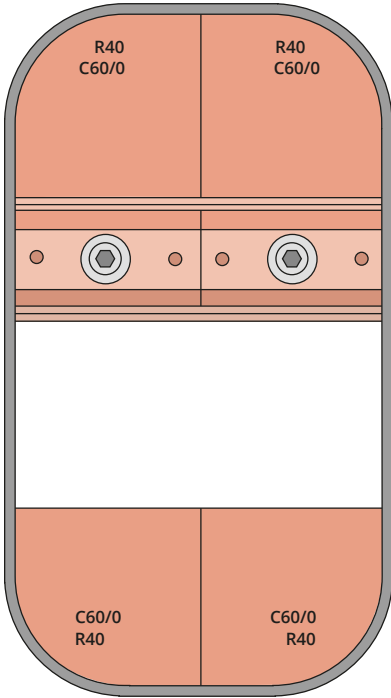


R40 - C60/40x40

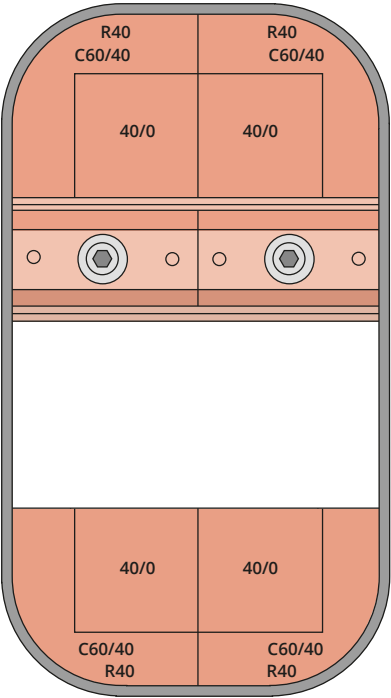


R60 - C60/40x40

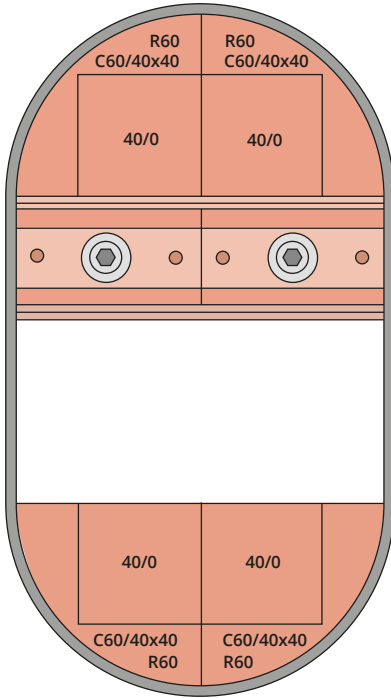


Disassembly STG

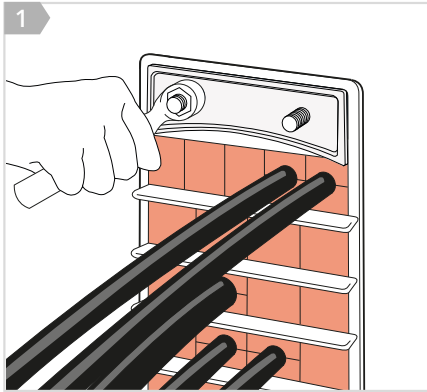


Remove the nuts and the hardware from the face of the endpacking.

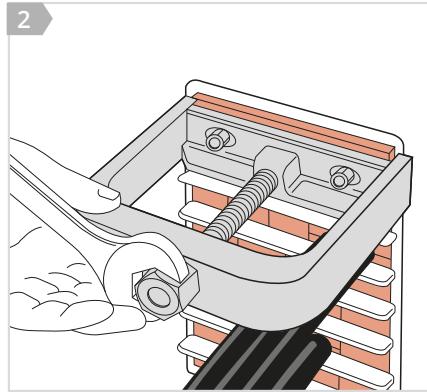

Attach the endpacking puller to the bolts with the nuts from the endpacking.

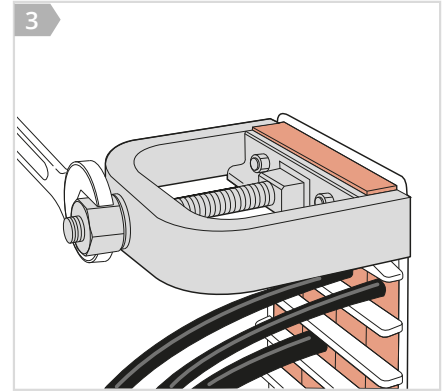

Tighten the bolt on the puller and the endpacking slides out.

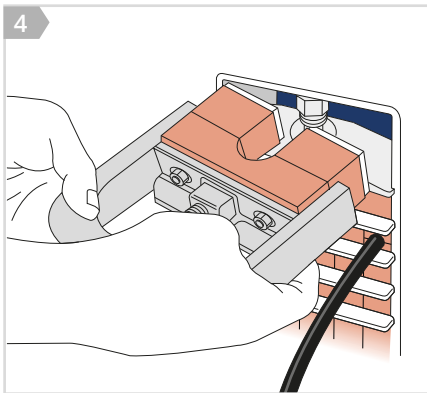

Remove the endpacking.

! MCT Brattberg shall not be held responsible for any errors or consequences
• resulting from the use of incorrect geometric dimensions or cut-outs. In case of any uncertainty,
the customer is required to consult MCT Brattberg.
All details must always be verified against the official information drawings provided by MCT Brattberg.

! Our products are type-approved, and when installed in accordance with our instructions,
• they are designed and tested to maintain fire- and pressure-tight integrity under catastrophic conditions.
If verification after installation is required, the BTB arrangement may be used; otherwise,
please contact MCT Brattberg for further guidance.

! MCT Brattberg offers training either on-site or at one of our facilities.
• We consider it important to provide training for installers to ensure safety.
Depending on the arrangement, such training is usually provided free of charge.


! If the transit needs to be reinstalled, the insert blocks may be reused.
• However, this entirely depends on whether the blocks are in a condition that allows them to seal the transit
correctly, considering their age or any environmental impact. The installer is responsible for making this
assessment.

If the installer feels that a qualified assessment cannot be made, we recommend replacing all insert blocks
in the rows above the modification, and all insert blocks in the affected row must also be replaced.

For assistance regarding product adaptation and use, please contact MCT Brattberg
via switchboard +46 455 37 52 00.

This instruction guide may be subject to revision and changes due to development and changes of the
material and products. the data is derived from tests and experience. if not stated as minimum values, the
data is average data and should be treated as such. calculations should be verified by actual tests.
the data is furnished without liability for the company and does not constitute a warranty or representation in
respect of the material or its use.
The company reserves the right to release new instruction guides in replacement.


RGS Frames

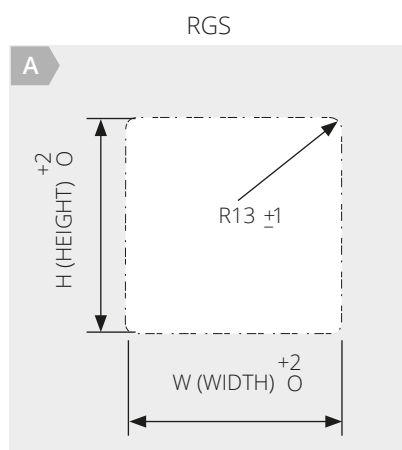

Frame size	H (Height)	W (Width)							
		1x	2x	3x	4x	5x	6x	7x	8x
RGS-1 w60	122	82,25	152,5	152,5	293	363,25	433,5	503,75	574
RGS-1 w40	122	62,25	112,5	112,5	213	263,25	313,5	363,75	414
RGS-2	122	141,5	272	272	533	663,5	794	924,5	1055
RGS-3 w60	181,5	82,25	152,5	152,5	293	363,25	433,5	503,75	574
RGS-3 w40	181,5	62,25	112,5	112,5	213	263,25	313,5	363,75	414
RGS-4	180,5	141,5	272	272	533	663,5	794	924,5	1055
RGS-5 w60	239	82,25	152,5	152,5	293	363,25	433,5	503,75	574
RGS-5 w40	239	62,25	112,5	112,5	213	263,25	313,5	363,75	414
RGS-6	239	141,5	272	272	533	663,5	794	924,5	1055
RGS-7 w60	297,5	82,25	152,5	152,5	293	363,25	433,5	503,75	574
RGS-7 w40	297,5	62,25	112,5	112,5	213	263,25	313,5	363,75	414
RGS-8	297,5	141,5	272	272	533	663,5	794	924,5	1055
RGS-2+2	243		272	272	533	663,5	794	924,5	1055
RGS-2+4	301,5		272	272	533	663,5	794	924,5	1055
RGS-2+6	360		272	272	533	663,5	794	924,5	1055
RGS-2+8	418,5		272	272	533	663,5	794	924,5	1055
RGS-4+4	360		272	272	533	663,5	794	924,5	1055
RGS-4+6	418,5		272	272	533	663,5	794	924,5	1055
RGS-4+8	477		272	272	533	663,5	794	924,5	1055
RGS-6+6	477		272	272	533	663,5	794	924,5	1055
RGS-6+8	535,5		272	272	533	663,5	794	924,5	1055
RGS-8+8	594		272	272	533	663,5	794	924,5	1055

Frame size	H (Height)	1x
RGS-2+2	233	141,5
RGS-2+4	291,5	141,5
RGS-2+6	350	141,5
RGS-2+8	408,5	141,5
RGS-4+4	350	141,5
RGS-4+6	408,5	141,5
RGS-4+8	467	141,5
RGS-6+6	467	141,5
RGS-6+8	525,5	141,5
RGS-8+8	584	141,5

RGSC Frames

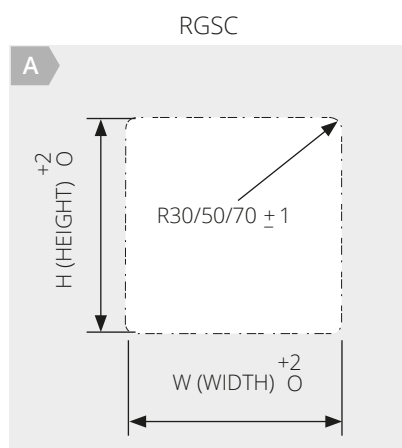

Example:

RGSC 6x1 R20 = cutout R30


RGSC 6x1 R40 = cutout R50

RGSC 6x1 R60 = cutout R70

Frame size	H (Height)	W (Width)							
		1x	2x	3x	4x	5x	6x	7x	8x
RGSC-2	122	141,5	272	272	533	663,5	794	924,5	1055
RGSC-4	180,5	141,5	272	272	533	663,5	794	924,5	1055
RGSC-6	239	141,5	272	272	533	663,5	794	924,5	1055
RGSC-8	297,5	141,5	272	272	533	663,5	794	924,5	1055
RGSC-2+2	243		272	272	533	663,5	794	924,5	1055
RGSC-2+4	301,5		272	272	533	663,5	794	924,5	1055
RGSC-2+6	360		272	272	533	663,5	794	924,5	1055
RGSC-2+8	418,5		272	272	533	663,5	794	924,5	1055
RGSC-4+4	360		272	272	533	663,5	794	924,5	1055
RGSC-4+6	418,5		272	272	533	663,5	794	924,5	1055
RGSC-4+8	477		272	272	533	663,5	794	924,5	1055
RGSC-6+6	477		272	272	533	663,5	794	924,5	1055
RGSC-6+8	535,5		272	272	533	663,5	794	924,5	1055
RGSC-8+8	594		272	272	533	663,5	794	924,5	1055



Frame size	H (Height)	1x
RGSC-2+2	233	141,5
RGSC-2+4	291,5	141,5
RGSC-2+6	350	141,5
RGSC-2+8	408,5	141,5
RGSC-4+4	350	141,5
RGSC-4+6	408,5	141,5
RGSC-4+8	467	141,5
RGSC-6+6	467	141,5
RGSC-6+8	525,5	141,5
RGSC-8+8	584	141,5

RGSK/RGS-BTB Frames

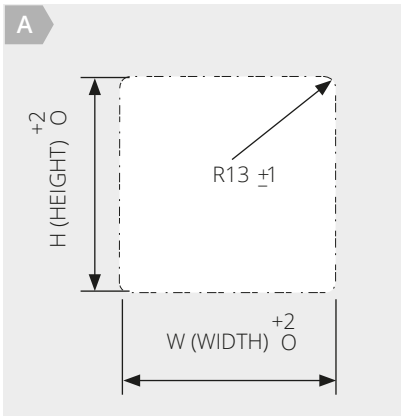



Frame size	H (Height)	W (Width)									
		1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
RGSK/RGS-btb-2	122	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-4	180,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-6	239	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-8	297,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-2+2	233	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-2+4	291,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-2+6	350	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-2+8	408,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-4+4	350	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-4+6	408,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-4+8	467	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-6+6	467	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-6+8	525,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-8+8	584	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-2+2+2	344	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-4+4+4	519,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-6+6+6	695	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320
RGSK/RGS-btb-8+8+8	870,5	145,5	276	406,5	537	667,5	798	928,5	1059	1189,5	1320

RGSFB Frames

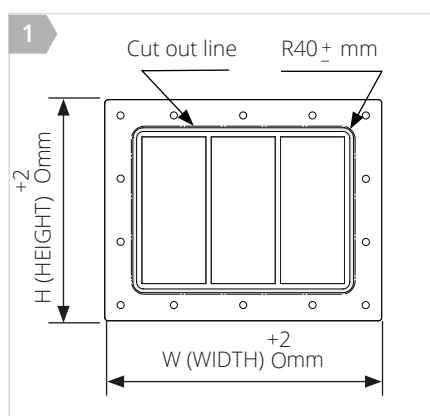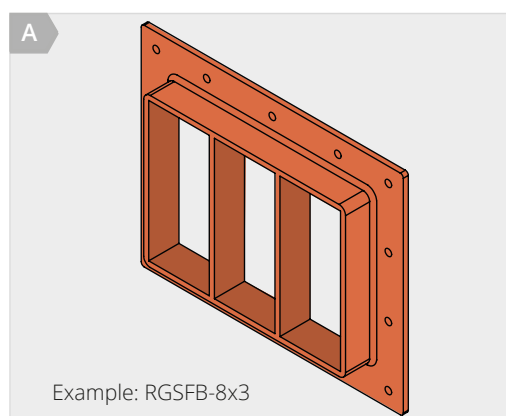



Frame size	H (Height)	W (Width)							
		1x	2x	3x	4x	5x	6x	7x	8x
RGSFB-2	181	200,5	331	461,5	592	722,5	853	983,5	1114
RGSFB-4	239,5	200,5	331	461,5	592	722,5	853	983,5	1114
RGSFB-6	298	200,5	331	461,5	592	722,5	853	983,5	1114
RGSFB-8	356,5	200,5	331	461,5	592	722,5	853	983,5	1114
RGSFB-2+2	302		331	461,5	592	722,5	853	983,5	1114
RGSFB-2+4	360,5		331	461,5	592	722,5	853	983,5	1114
RGSFB-2+6	419		331	461,5	592	722,5	853	983,5	1114
RGSFB-2+8	477,5		331	461,5	592	722,5	853	983,5	1114
RGSFB-4+4	419		331	461,5	592	722,5	853	983,5	1114
RGSFB-4+6	477,5		331	461,5	592	722,5	853	983,5	1114
RGSFB-4+8	536		331	461,5	592	722,5	853	983,5	1114
RGSFB-6+6	536		331	461,5	592	722,5	853	983,5	1114
RGSFB-6+8	594,5		331	461,5	592	722,5	853	983,5	1114
RGSFB-8+8	653		331	461,5	592	722,5	853	983,5	1114
RGSFB-2+2	292	200,5							
RGSFB-2+4	350,5	200,5							
RGSFB-2+6	409	200,5							
RGSFB-2+8	467,5	200,5							
RGSFB-4+4	409	200,5							
RGSFB-4+6	467,5	200,5							
RGSFB-4+8	526	200,5							
RGSFB-6+6	526	200,5							
RGSFB-6+8	584,5	200,5							
RGSFB-8+8	643	200,5							

RGSF Frames

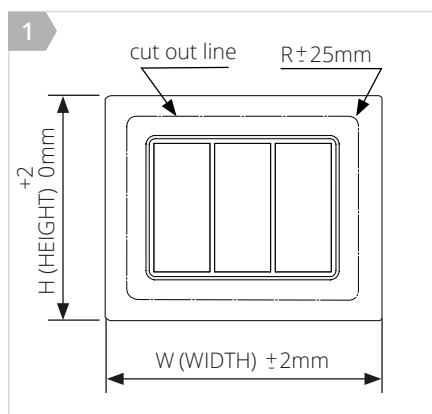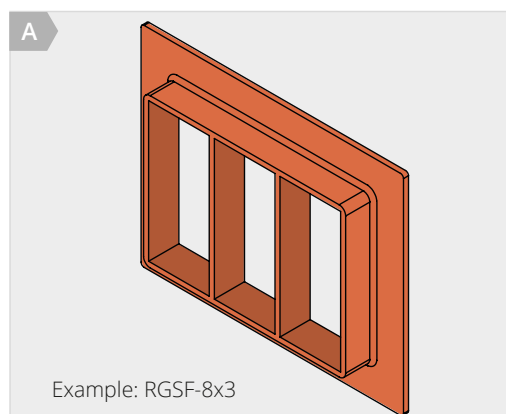

Frame size	H (Height)	W (Width)							
		1x	2x	3x	4x	5x	6x	7x	8x
RGSF-2	141	160,5	291	421,5	552	682,5	813	943,5	1074
RGSF-4	199,5	160,5	291	421,5	552	682,5	813	943,5	1074
RGSF-6	258	160,5	291	421,5	552	682,5	813	943,5	1074
RGSF-8	316,5	160,5	291	421,5	552	682,5	813	943,5	1074
RGSF-2+2	262		291	421,5	552	682,5	813	943,5	1074
RGSF-2+4	320,5		291	421,5	552	682,5	813	943,5	1074
RGSF-2+6	379		291	421,5	552	682,5	813	943,5	1074
RGSF-2+8	437,5		291	421,5	552	682,5	813	943,5	1074
RGSF-4+4	379		291	421,5	552	682,5	813	943,5	1074
RGSF-4+6	437,5		291	421,5	552	682,5	813	943,5	1074
RGSF-4+8	496		291	421,5	552	682,5	813	943,5	1074
RGSF-6+6	496		291	421,5	552	682,5	813	943,5	1074
RGSF-6+8	554,5		291	421,5	552	682,5	813	943,5	1074
RGSF-8+8	613		291	421,5	552	682,5	813	943,5	1074
RGSF-2+2	252	160,5							
RGSF-2+4	310,5	160,5							
RGSF-2+6	369	160,5							
RGSF-2+8	427,5	160,5							
RGSF-4+4	369	160,5							
RGSF-4+6	427,5	160,5							
RGSF-4+8	486	160,5							
RGSF-6+6	486	160,5							
RGSF-6+8	544,5	160,5							
RGSF-8+8	603	160,5							


RGB/RGG Frames

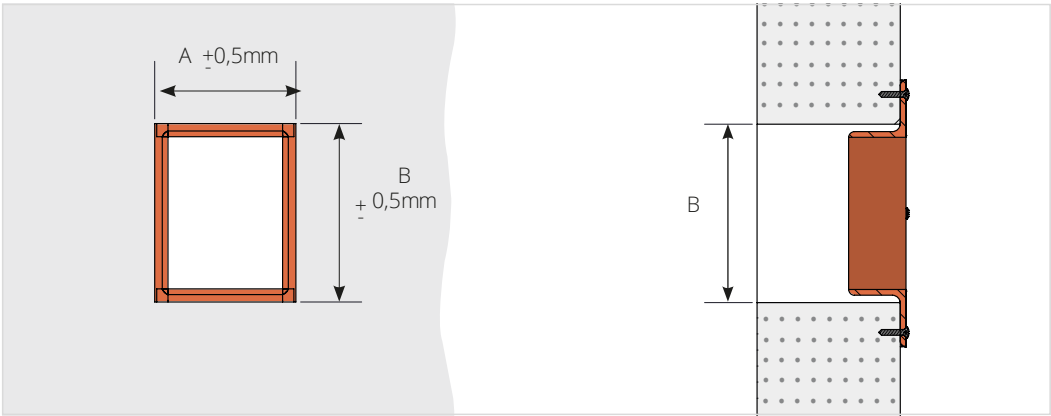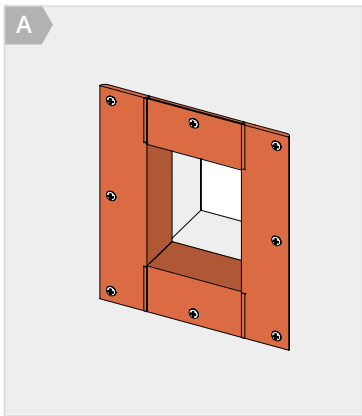

These cutout dimensions are only valid for MCT Brattberg RGB/RGG frames manufactured in 60x60x6 mm anglebar.

Frame size	Cut out size								
	B (Height)	A (width Multiple Frames)							
		x1	x2	x3	x4	x5	x6	x7	x8
2	128	148	278	409	539	670	801	932	1063
4	187	148	278	409	539	670	801	932	1063
6	245	148	278	409	539	670	801	932	1063
8	304	148	278	409	539	670	801	932	1063
2+2	239	148	278	409	539	670	801	932	1063
2+4	298	148	278	409	539	670	801	932	1063
2+6	356	148	278	409	539	670	801	932	1063
2+8	415	148	278	409	539	670	801	932	1063
4+4	356	148	278	409	539	670	801	932	1063
4+6	415	148	278	409	539	670	801	932	1063
4+8	473	148	278	409	539	670	801	932	1063
6+6	473	148	278	409	539	670	801	932	1063
6+8	532	148	278	409	539	670	801	932	1063
8+8	590	148	278	409	539	670	801	932	1063



RGG

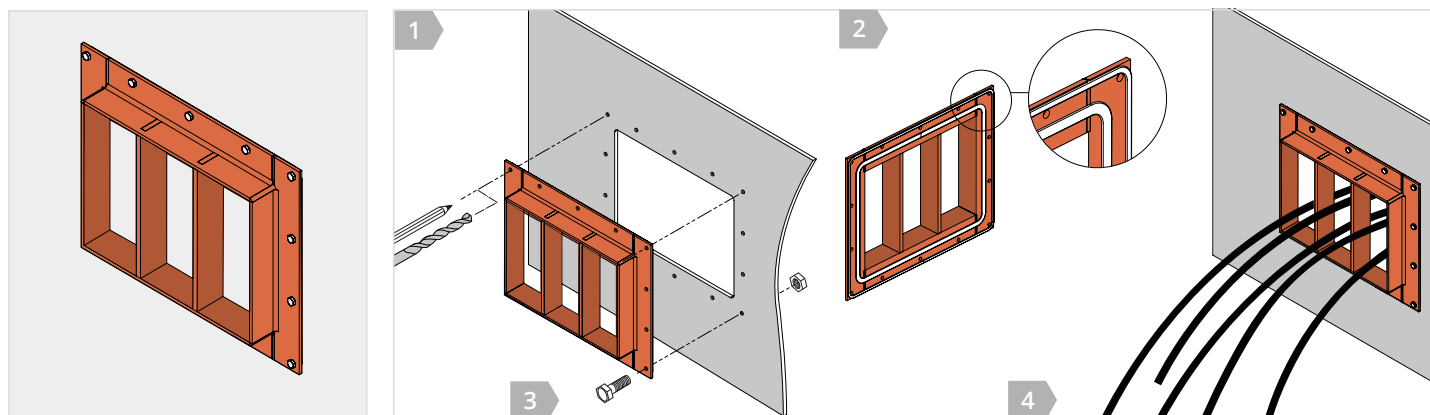

1. Position the frame to the steel plate, mark and drill hole pattern to match the frame.
2. Apply two strings of sealant to the frame.


3. Install the frame to the steel plate with M8 bolts, tighten to 20 Nm.
4. Pull cables/pipes thru the frame and install the MCT Brattberg sealing.

RGSF

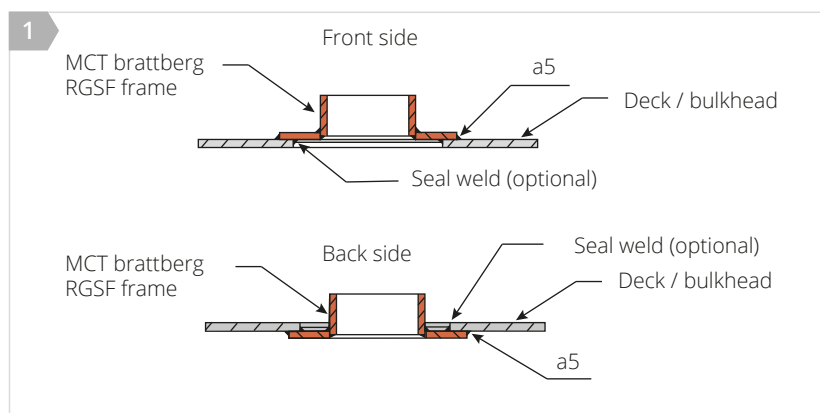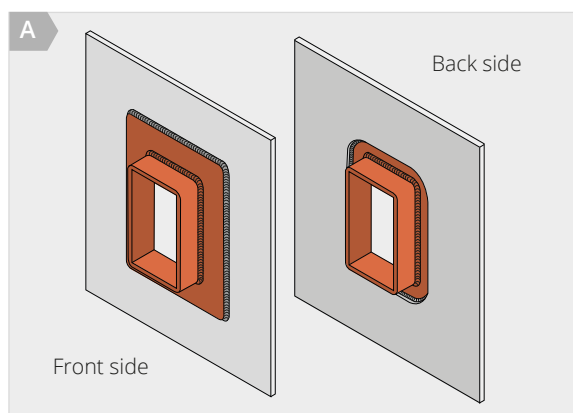

1. Position the RGSF frame flat to the bulkhead or deck.
2. Tack weld on the front side of the frame in each corner and then in every 200 mm between corners.
3. Continue welding around the front side of the frame in practical order.
4. Complete by seal welding around the rear side of the frame (optional).


RGSFB

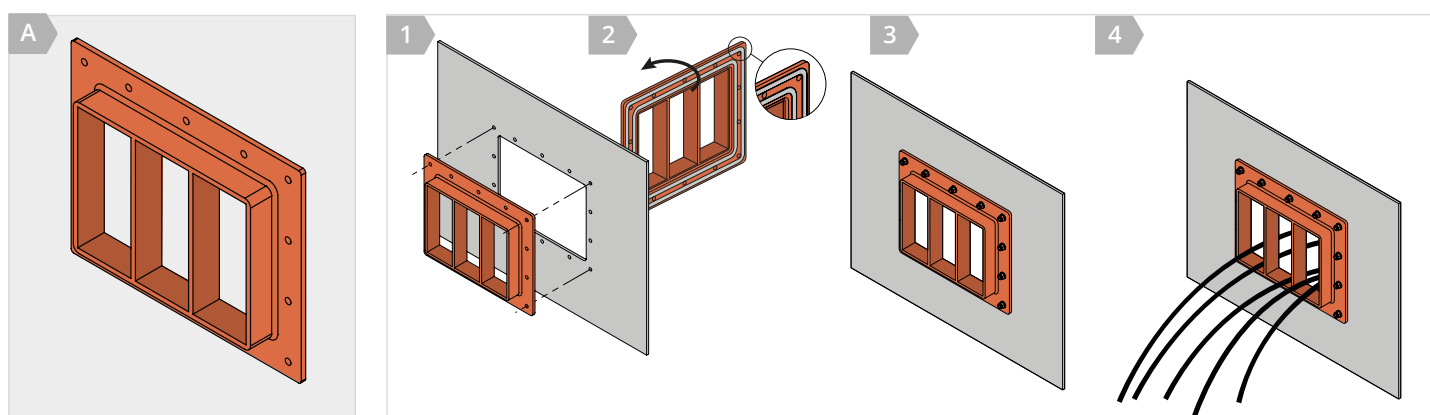

1. Position the frame to the bulkhead/deck, mark and drill hole pattern to match the frame.
2. Apply two strings of sealant to the frame.

3. Install the frame to the bulkhead/deck with M12 bolts, tighten to 75 Nm.
4. Pull cables/pipes thru the frame and install the MCT Brattberg sealing.

RGSFBO

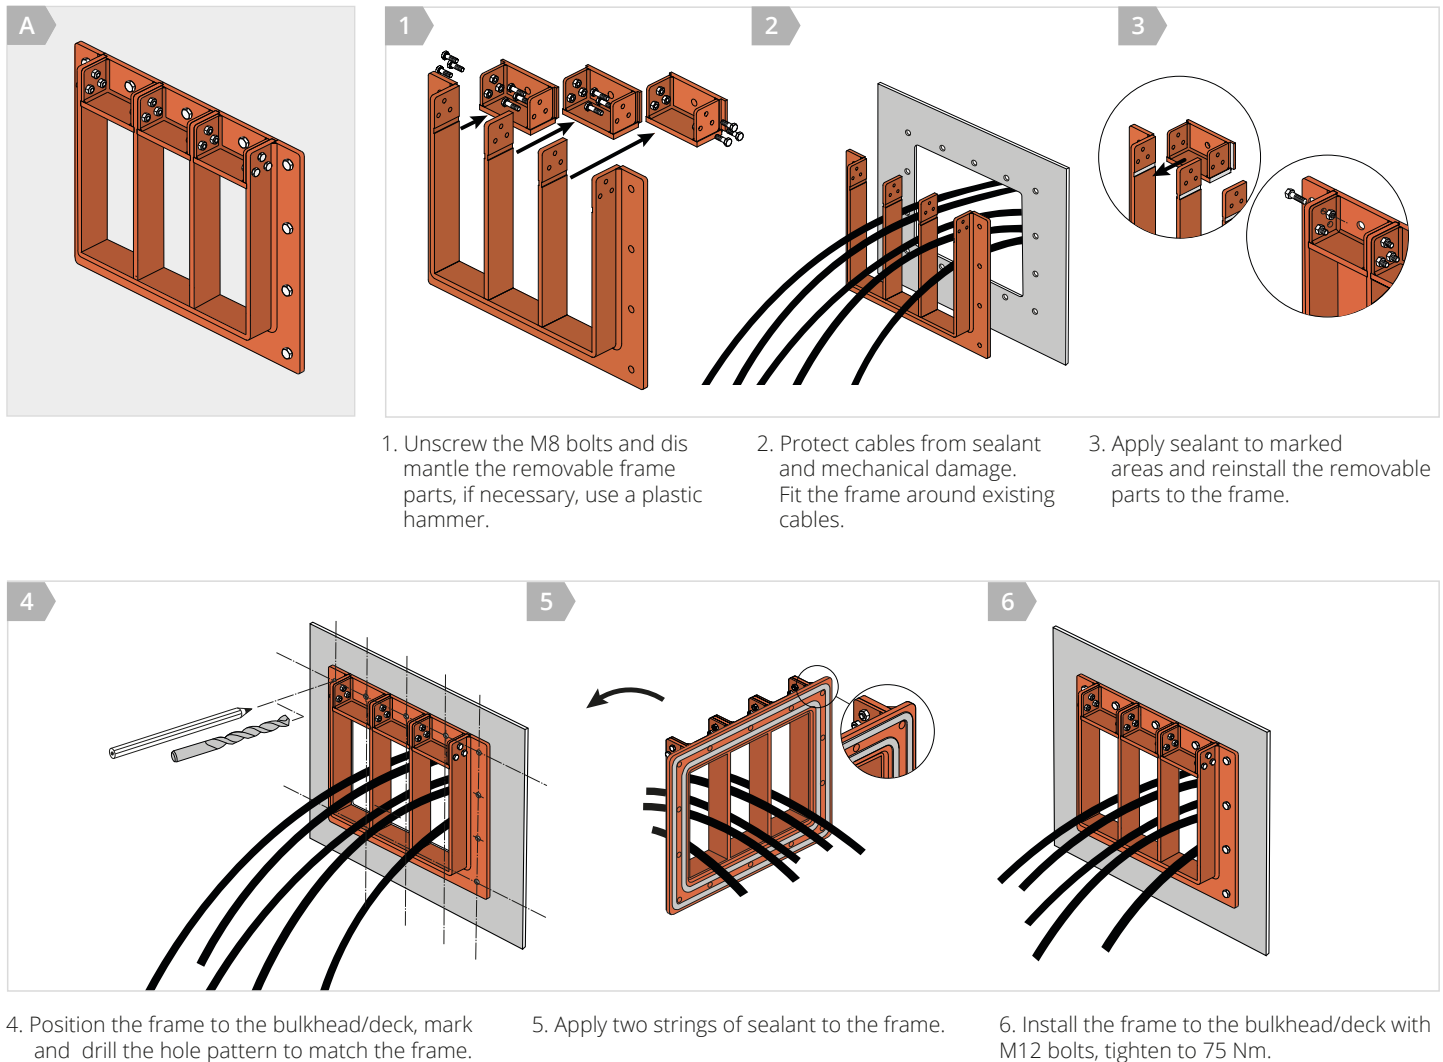

RGSO

A

1

2

3

4

5

Dimension table RGSO frames


RGSO Frame Width	120,0 - 121,0
RGSO-2 Height	100,5 - 101,5
RGSO-4 Height	159,0 - 160,0
RGSO-6 Height	217,5 - 218,5
RGSO-8 Height	276,0 - 277,0

Welding Instruction RGSO


B

1

RGB, RGG, RGGO, RGGOK

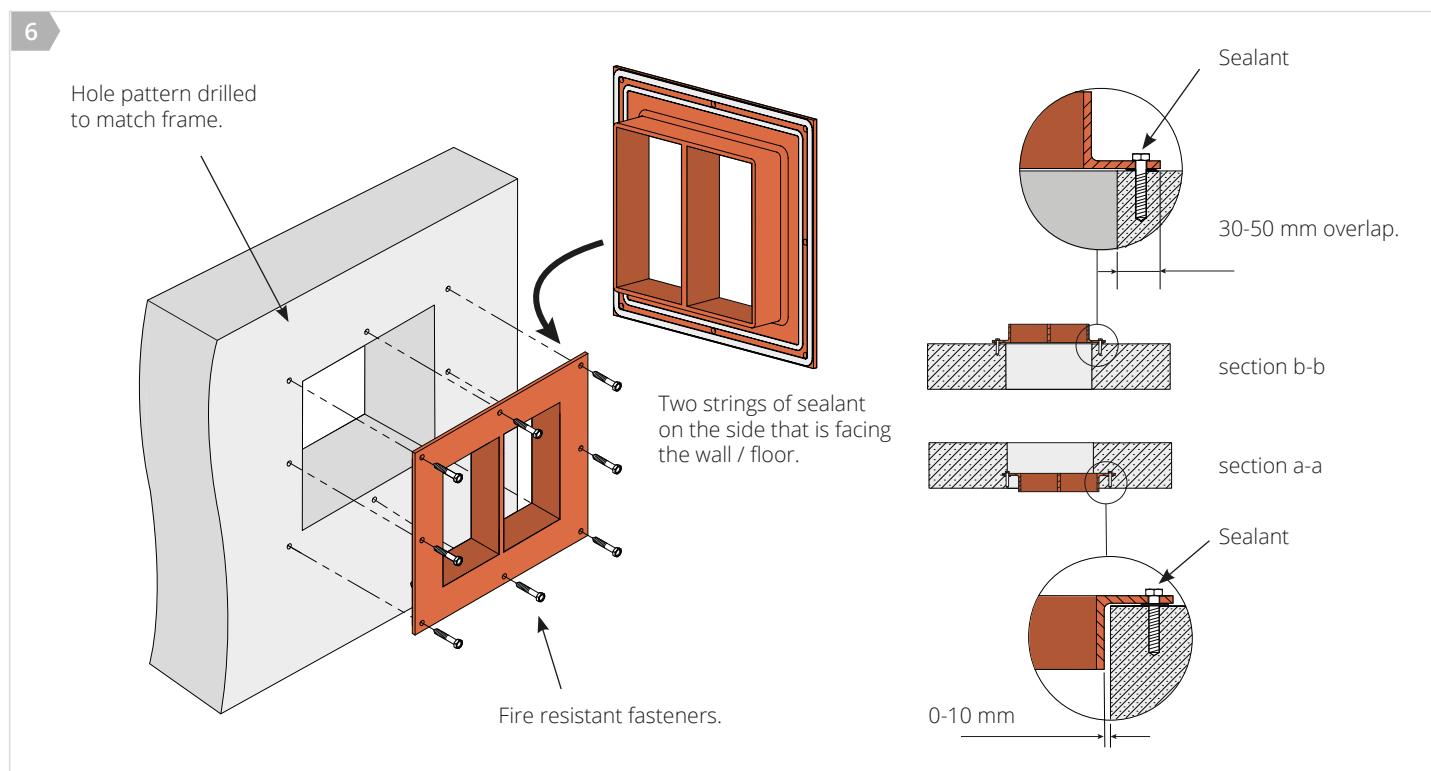


RGGOK

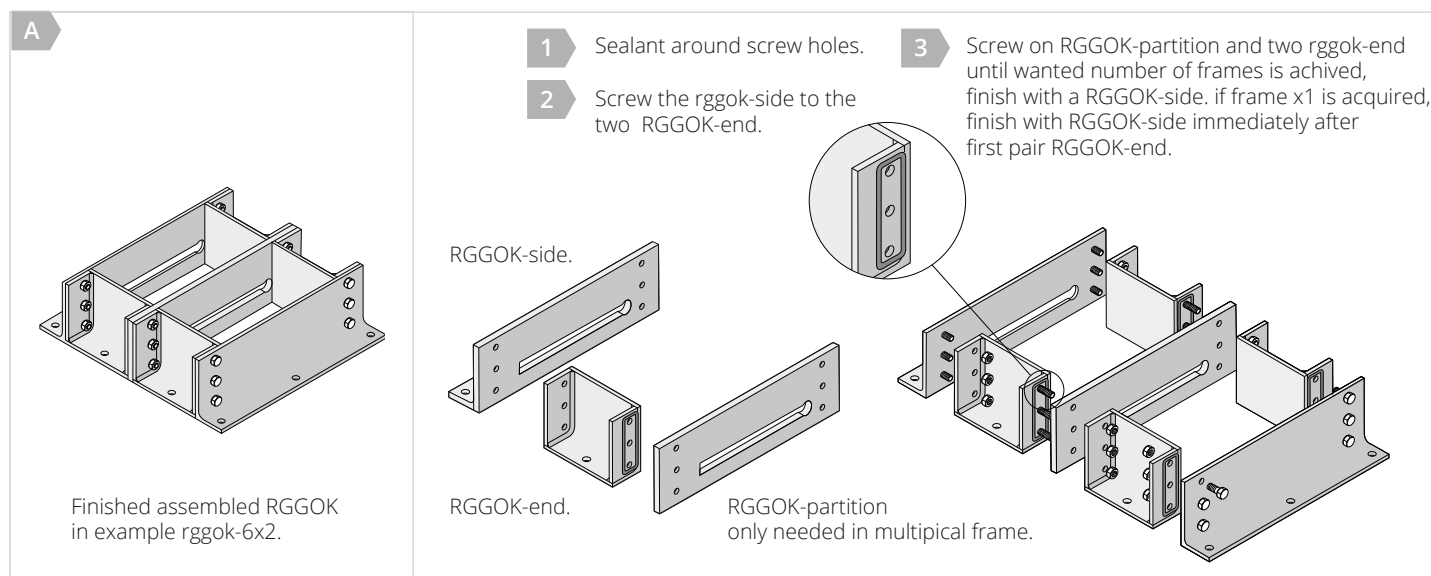


Follow these 3 steps to assemble RGGOK.

RGG-O

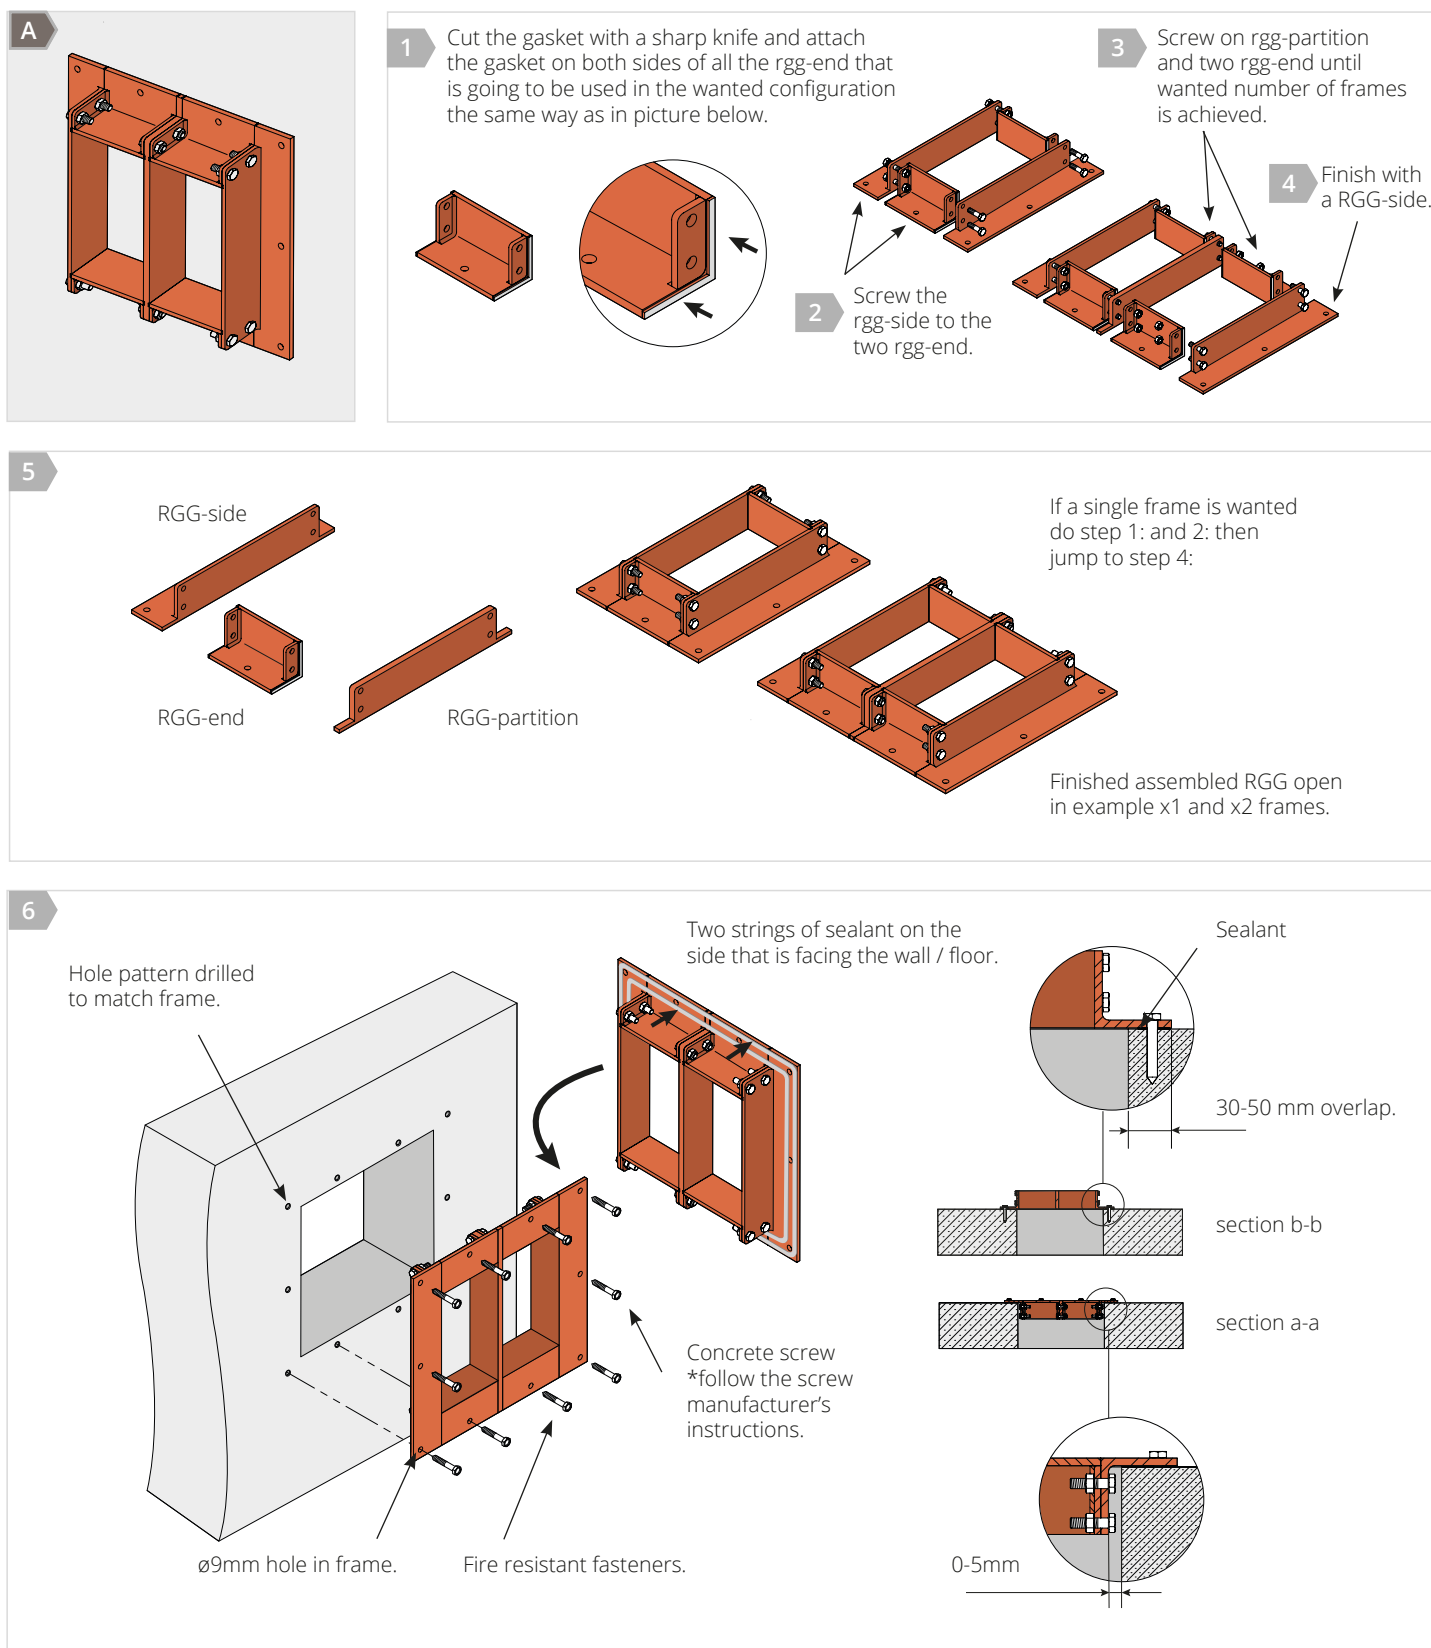

Casted/embedded frames

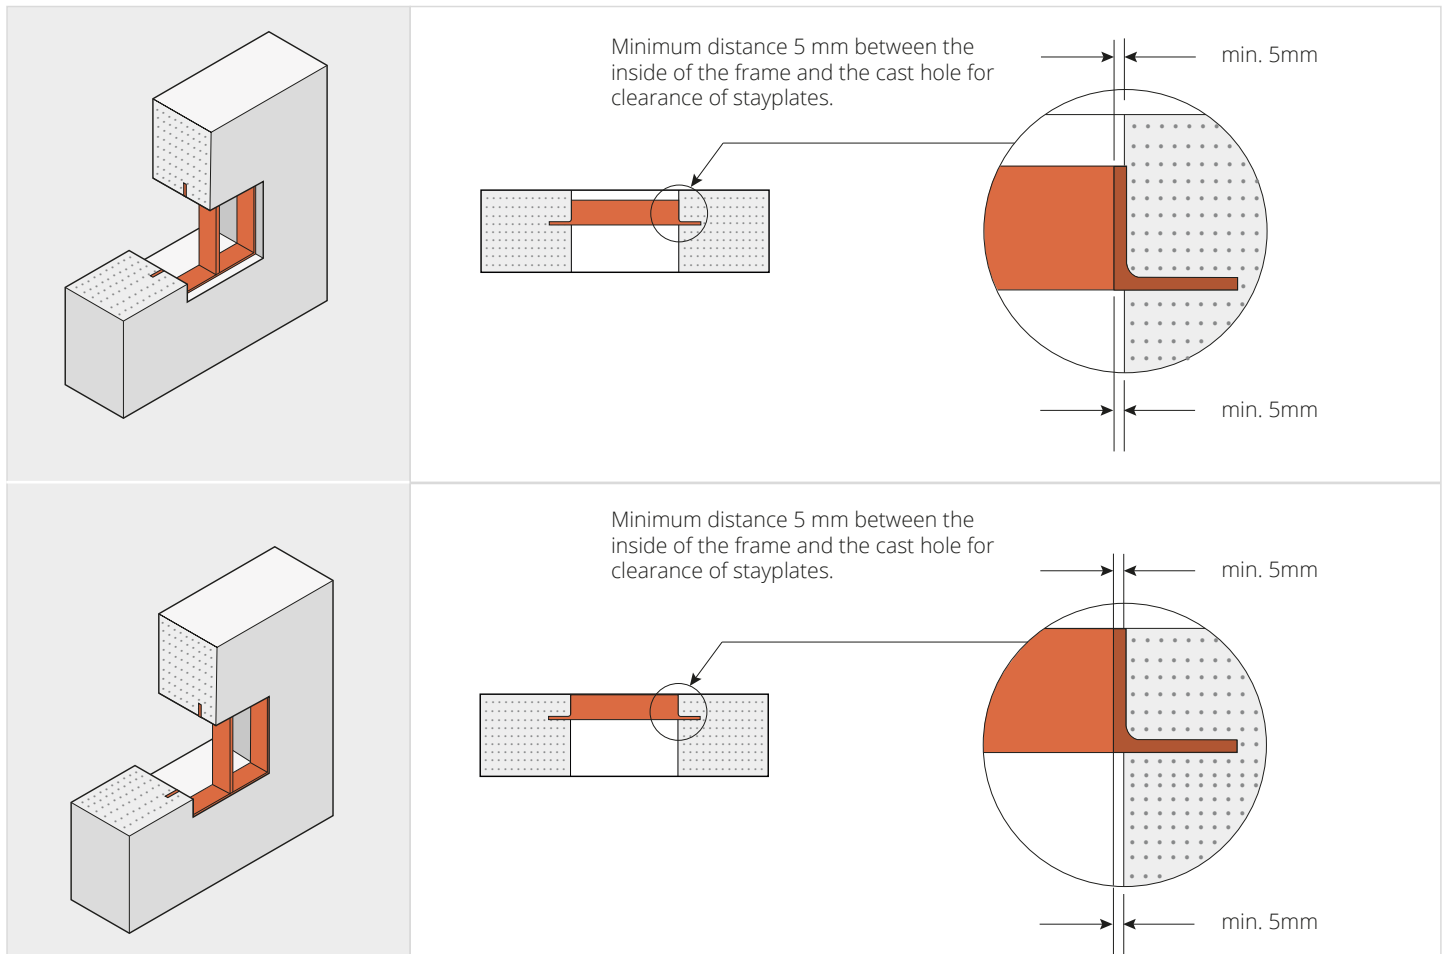

Polystyrene casting form

